


- Box content:  
 6 grey stripes  
 6 blue stripes  
 1 «james cook klassik» rear logo  
 2 «westfalia» roof logos  
 a bunch of small squared white stickers



As a first step you must to identify and locate every vinyl piece on your van.


Place the vinyls on your van using masking tape.

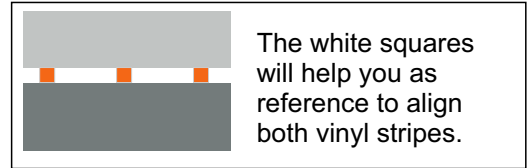



Stick the pieces of vinyl starting with the blue ones. Place a piece of vinyl with some masking tapes (pic1) leaving free half of the strip of vinyl, separate and cut from this end the white paper holder.

Carefully, stick the vinyl by sliding a squeegee from the middle to the end of the stripe. (pics 2 & 3).  
 Dettach all masking tape stripes, dettach the rest of white paper support and stick the vinyl like the previous step.

Blue vinyl is done. Stick some blue squares all allong the blue vinyl strip, it will work as spacers between blue and grey stripes.

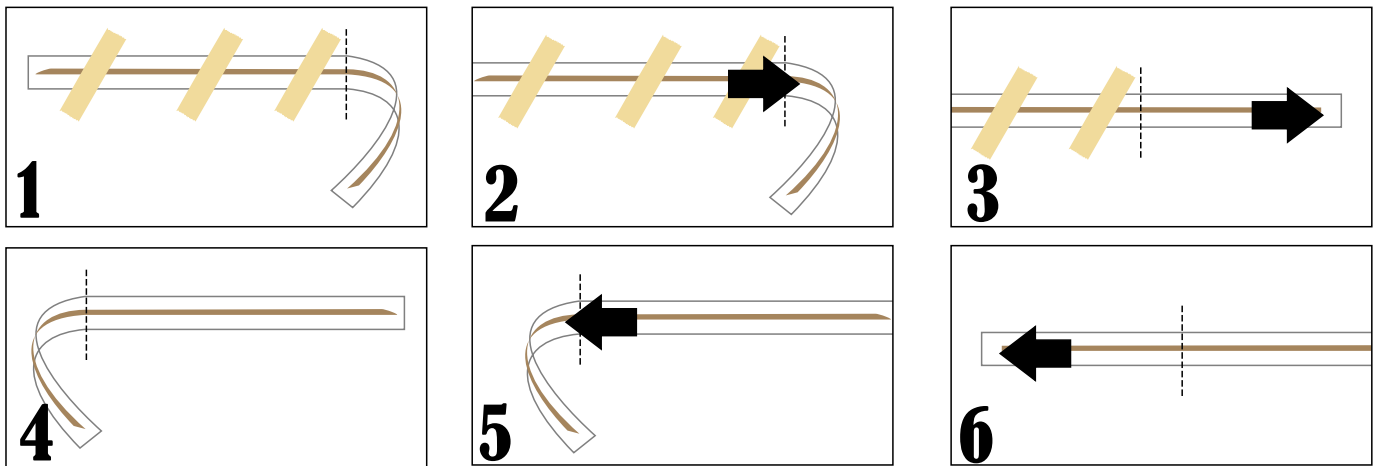

- 1.- Put a piece upside down on a table large enough so that the vinyl does not hang from the sides.
- 2.- Separate the white support paper completely.
- 3.- join it again by matching the edge of the backing paper with the edge of the vinyl (see Figures 7 and 8).
- 4.-Put the grey vinyl on the body and resituate it until it perfectly matches along the blue vinyl.
- 5.- When you see that it is in place, firmly stick the transfer that is left on the blue vinyl. Remove the backing paper that you had stuck on the grey vinyl and carefully stick the vinyl to the sheet of your MB.
6. Peel the transfer carefully (rub it against the sheet before).

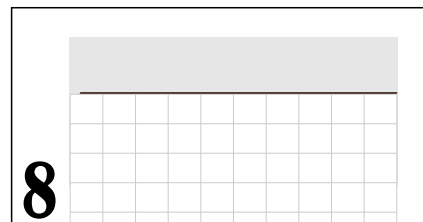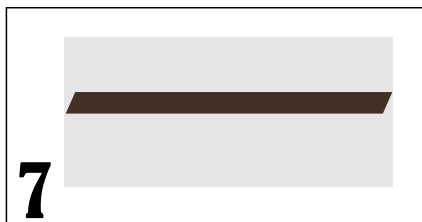

7. Remove the squares you used as spacers.
- 8.- Repeat the operation until you have placed all the pieces of the strip.

Take care about bubbles, to avoid them it is best to make sweeps from side to side of the vinyl moving forward a little bit in each pass

