

Assembly Instructions

Along with these instructions, you have received the following items:

- 4 strips of dark brown vinyl
- 4 strips of light brown vinyl
- 2 compass roses
- 1 strip of squares (separators)



Preparation:

Before you begin, identify the location of each piece using the attached images.









Presentation of the pieces:

Place each piece in its corresponding position.

Use masking tape to temporarily fix them along the vehicle. It is recommended to place a piece of tape at each end of the vinyl strip to make the work easier.

Fixing the pieces:

Once you are sure that the pieces are well aligned, start sticking them. Begin with the light brown vinyl strips, choosing the left side if you are right-handed or the right side if you are left-handed.

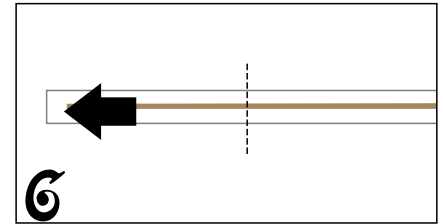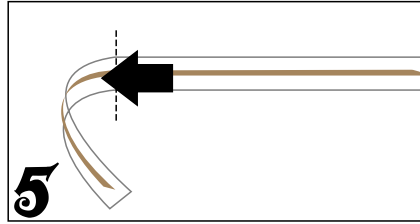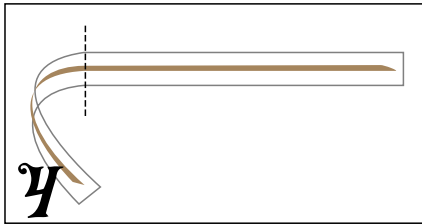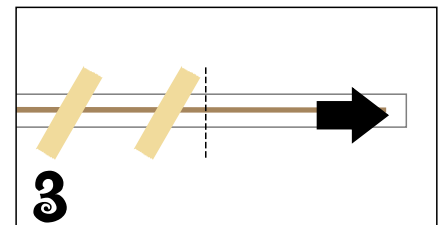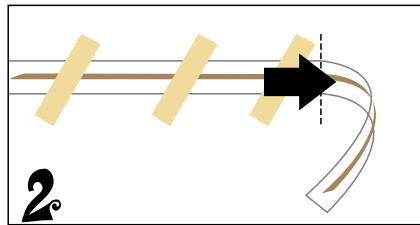
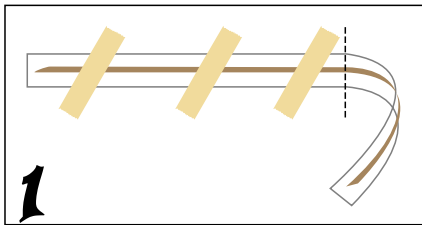


Cross one or more pieces of masking tape from the middle of the piece to one side.

Remove the backing paper (the one with the grid) and cut it near the middle of the piece (at the dotted line). Apply the vinyl by "pulling" it from the dotted line to the end of the piece (see figs. 1, 2, and 3).

Remove the masking tape from the rest of the piece and repeat the process (see figs. 4, 5, and 6).

Finishing the light brown vinyl:

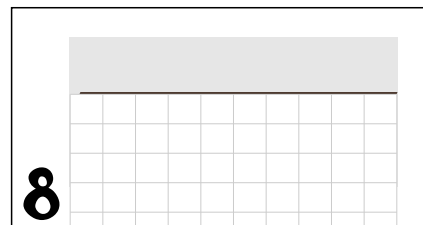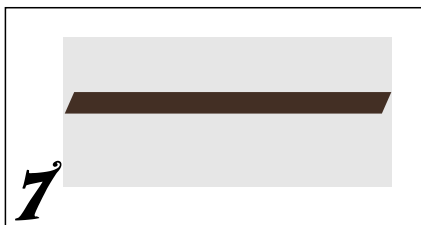

Once the light brown vinyl is in place, remove the transfer film (the transparent film). Make sure the vinyl is well adhered; if necessary, rub it to ensure its fixation.

Placing the dark brown vinyl:

Place the white squares so that one of their sides aligns with the top edge of the light brown vinyl.


Lay the vinyl piece face down on a large table, ensuring it does not hang over the edges.

Completely remove the backing paper.

Reapply the backing paper, aligning its edge with the edge of the dark brown vinyl (see figs. 7 and 8).

Place the dark brown vinyl piece on the body and adjust its position until it perfectly matches the light brown vinyl.

Once aligned, press the transfer film firmly onto the light brown vinyl. Remove the backing paper from the dark vinyl and carefully adhere it to the vehicle's body. Gently peel off the transfer film, ensuring that the vinyl does not come off. If necessary, rub it against the metal. Remove the squares used as separators. Repeat the process until all pieces of the strip are in place.

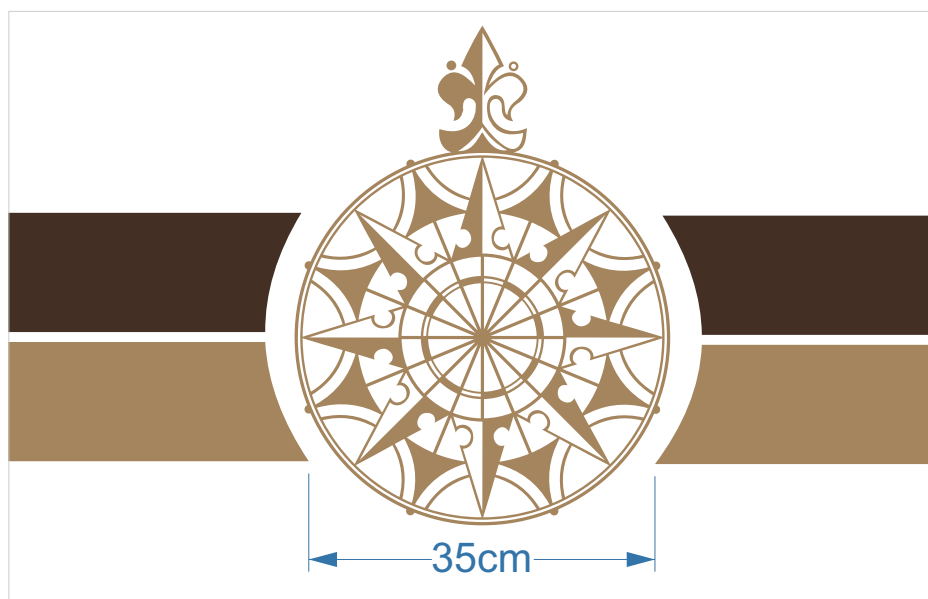

Placing the compass roses:

Although the compass rose is large and may seem complicated, follow the same steps as with the strips: first stick one half and then the other.

Additional Tips:

To find the vertical on a vehicle's body, use a square or any large, lightweight object that has a 90-degree angle (a cardboard box can work). Use the already placed strips as a guide to mark the vertical.

Keep in mind that the distance indicated in the diagram corresponds to the two lower corners of the light brown vinyl.

